




Setting the automatic mode

Association of a beacon with a vehicle


STEP N°1

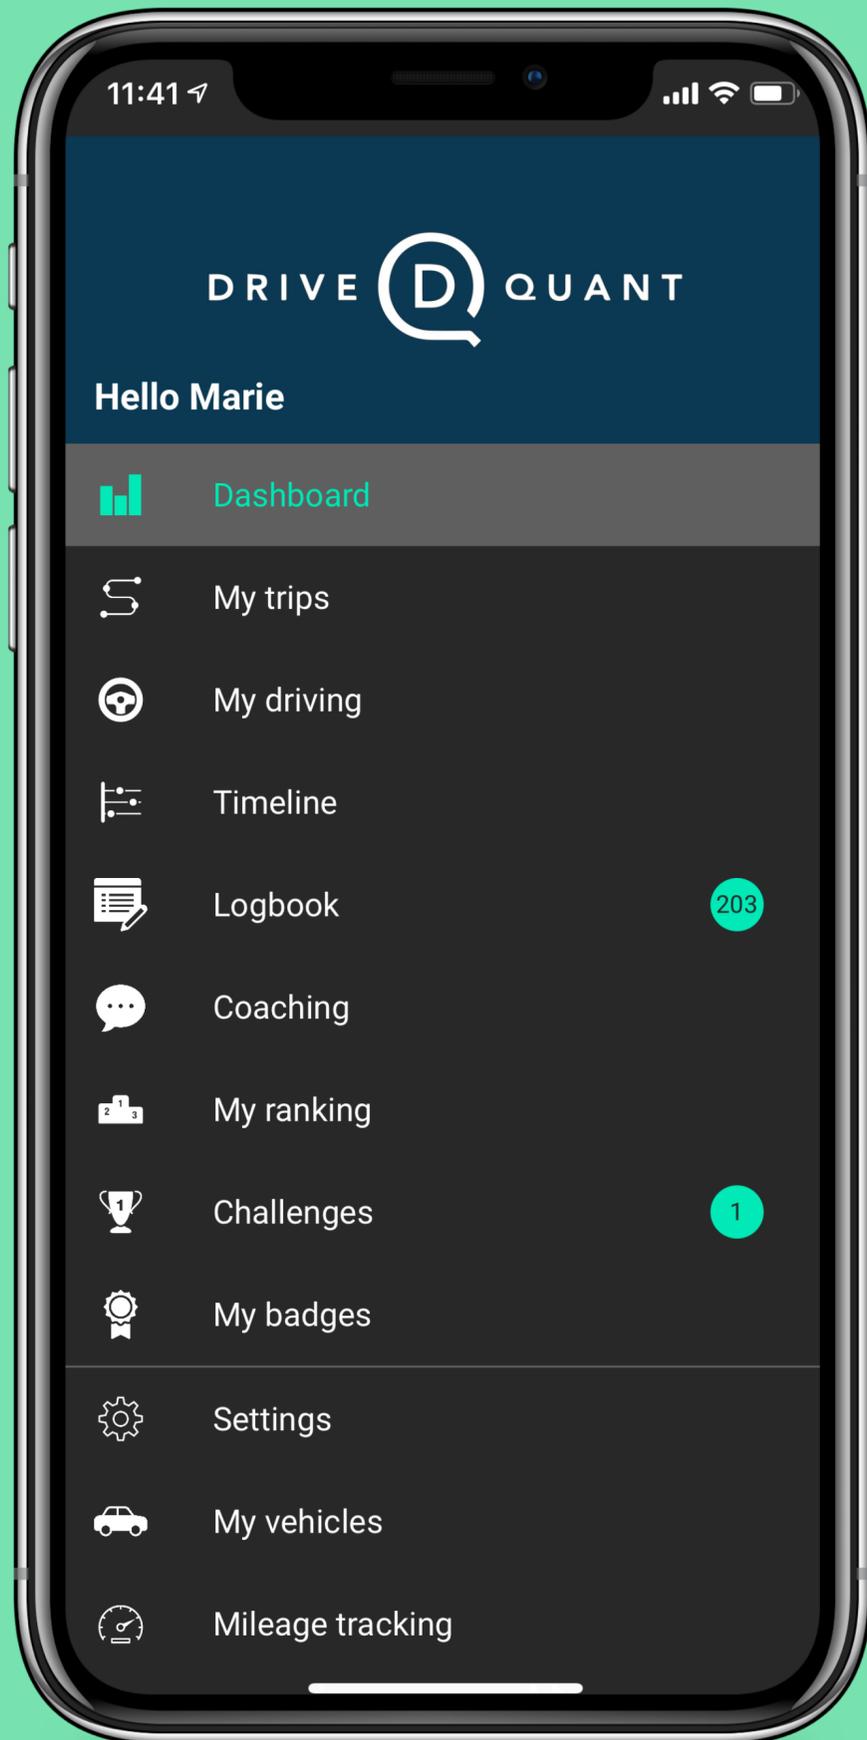

In the application menu,
click on **Settings**




STEP N°2

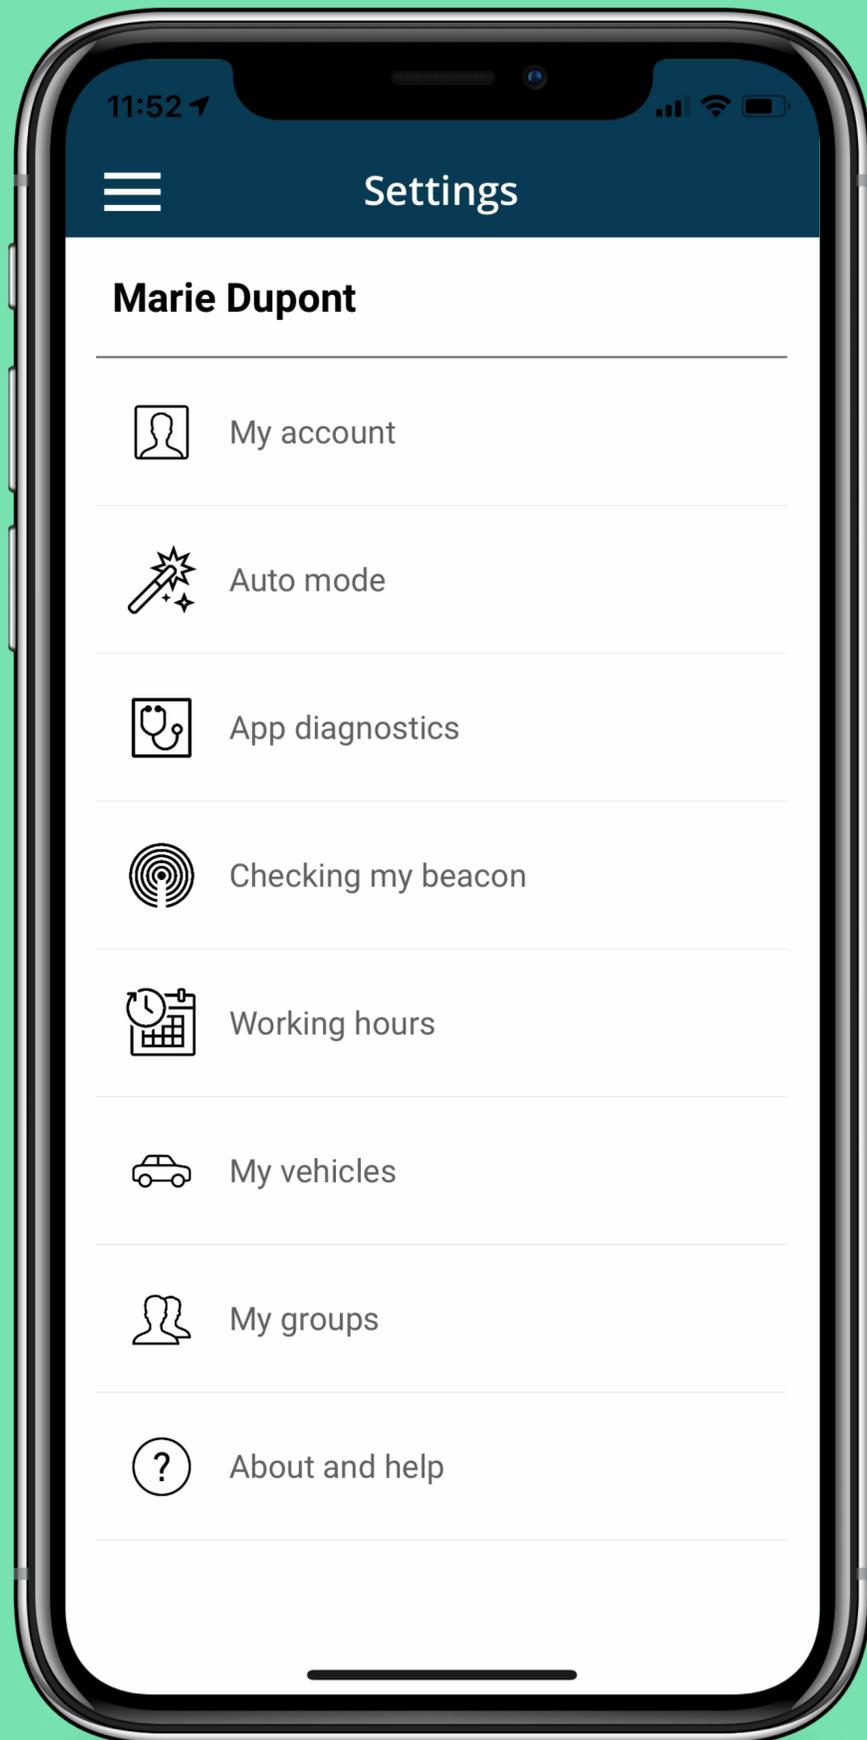

In the Settings,
click on **My vehicles**



STEP N°3

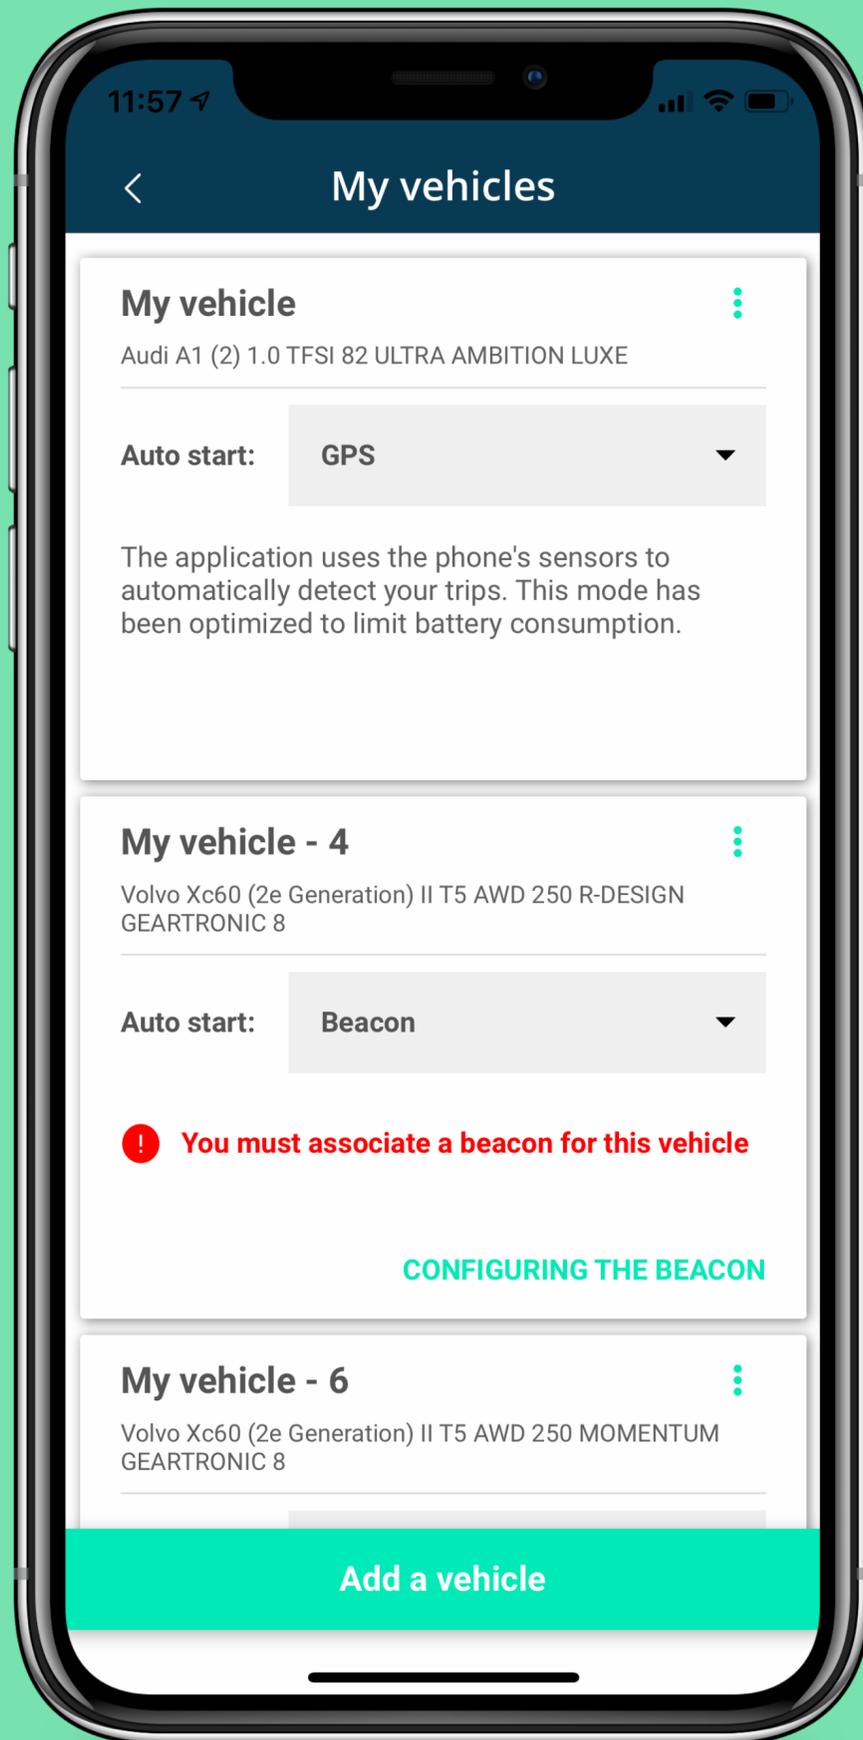


An alert message is displayed as long as the beacon has not been linked to the vehicle

To perform this operation, click on **CONFIGURING THE BEACON**



STEP N°4

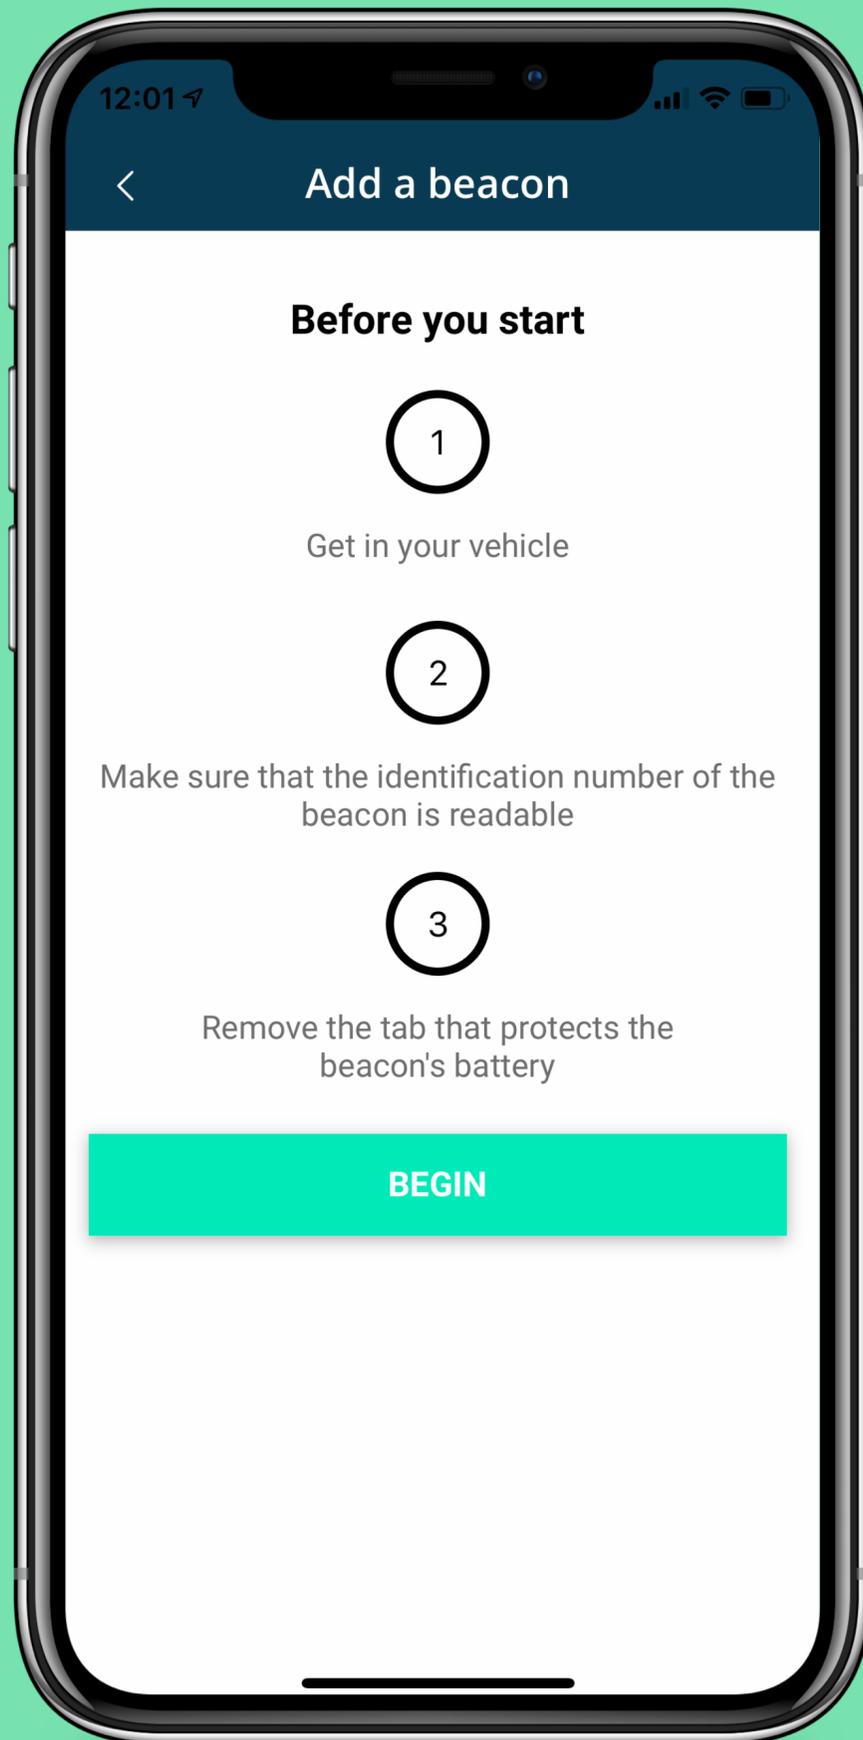


A screen appears explaining the prerequisites for linking a beacon to the vehicle



If all the conditions are ok, click on **BEGIN**




STEP N°5

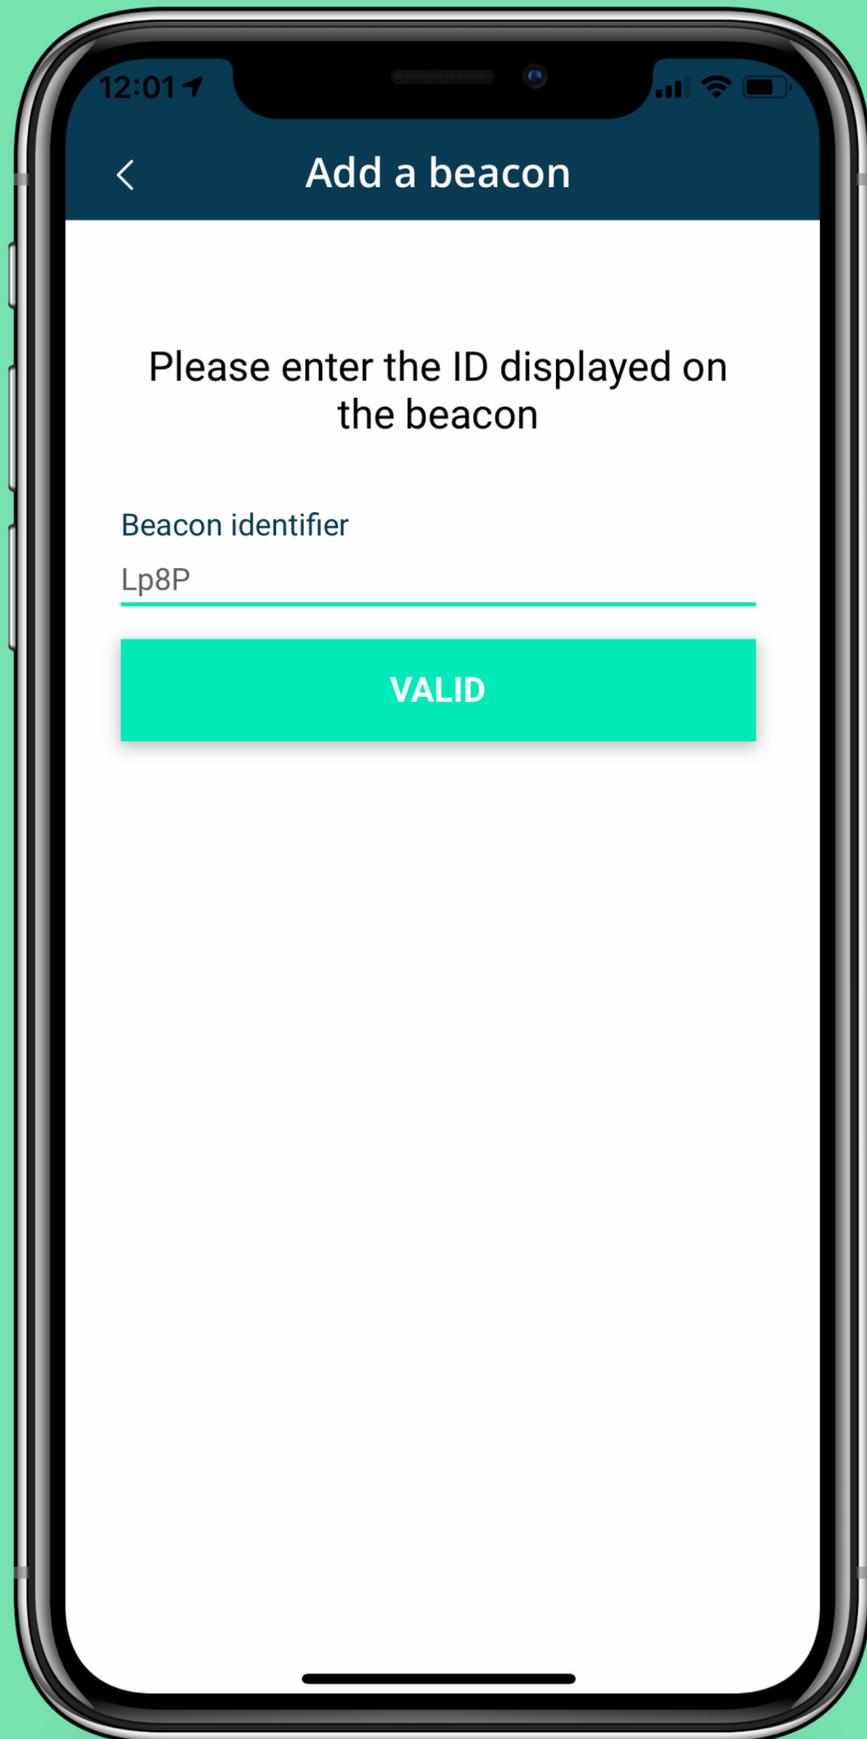

Enter the ID that you can read on the beacon and click on **VALIDATE**



STEP N°6

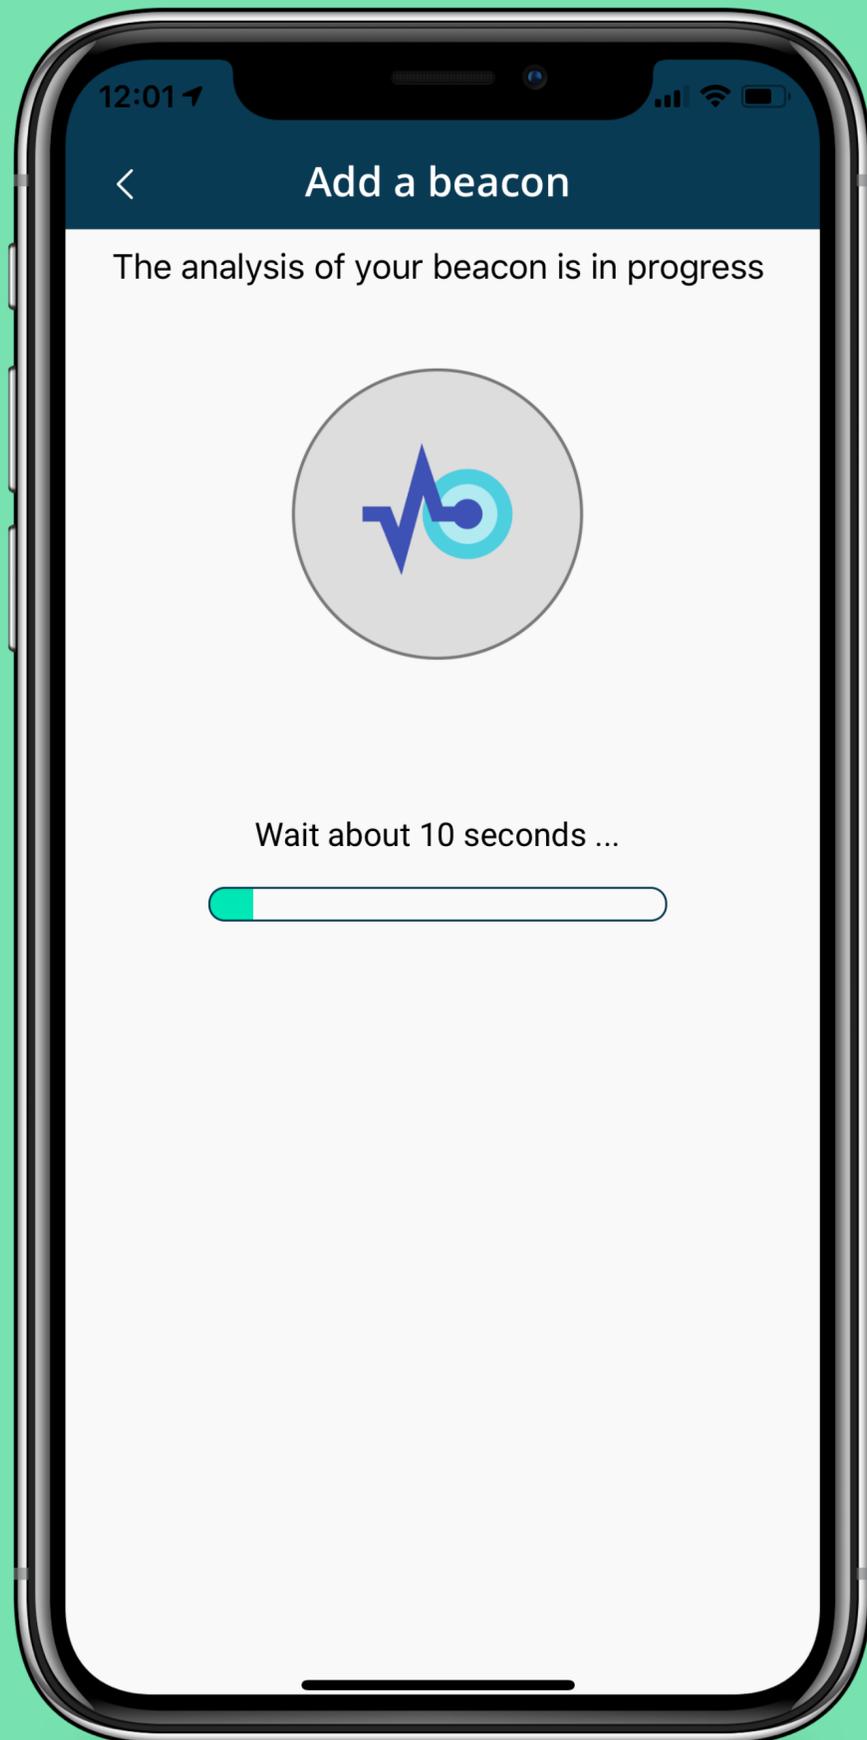


The application verifies that the ID exists, that the corresponding beacon is on and that it is near the phone

This operation takes a few seconds



STEP N°7

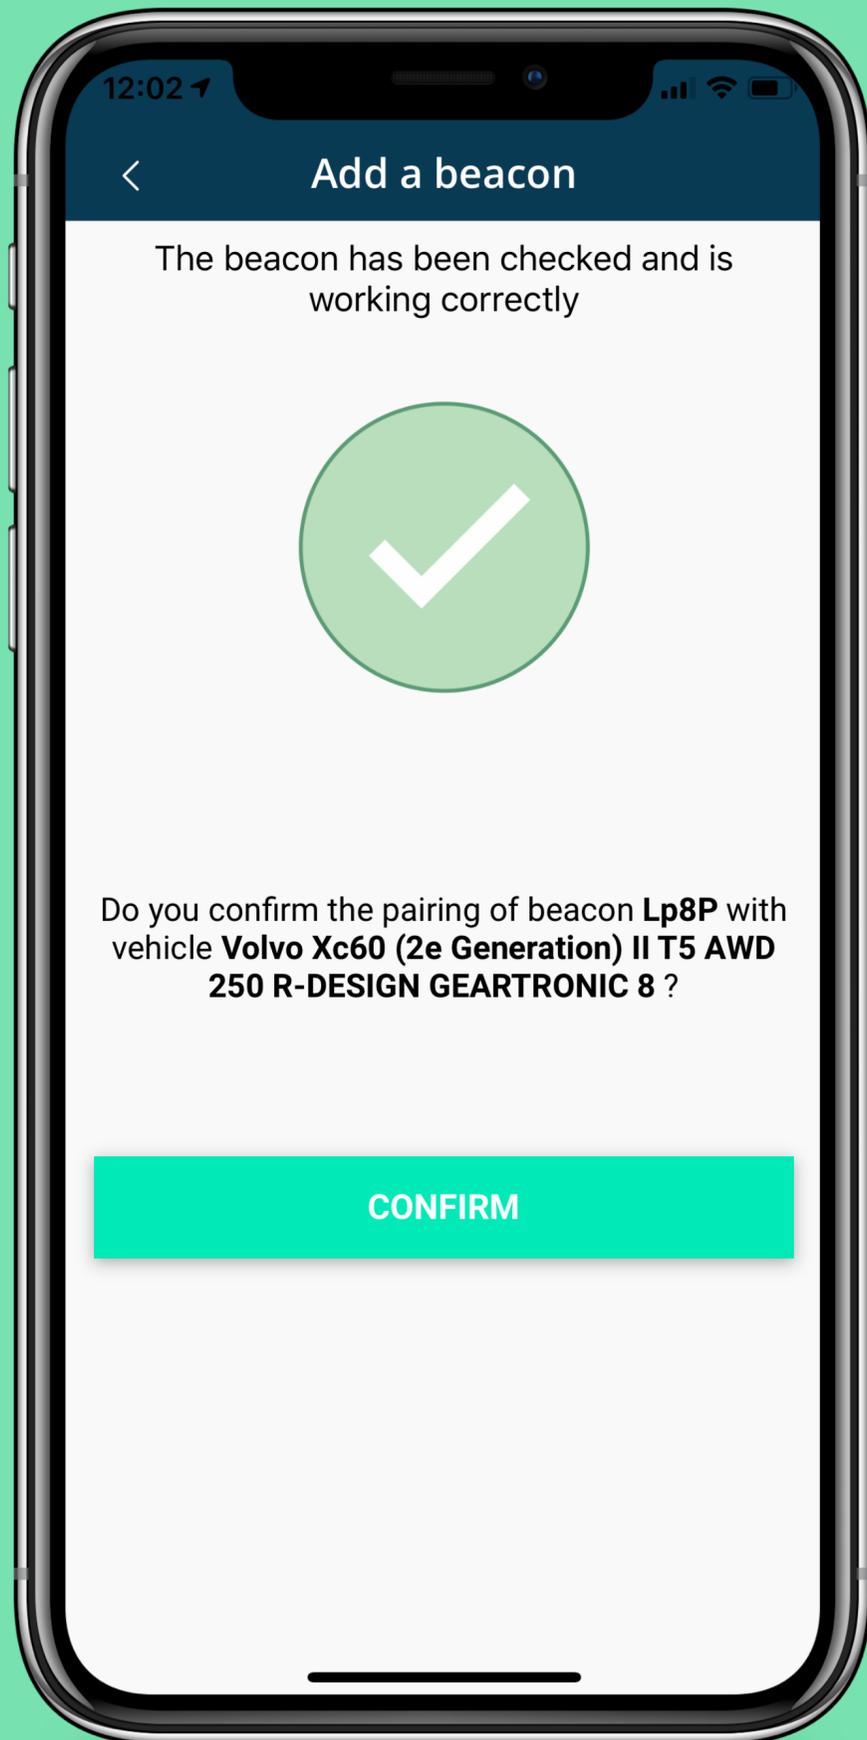


If the application detects the beacon, a success message appears

If you want to link the beacon to the vehicle, click on **CONFIRM**



STEP N°8

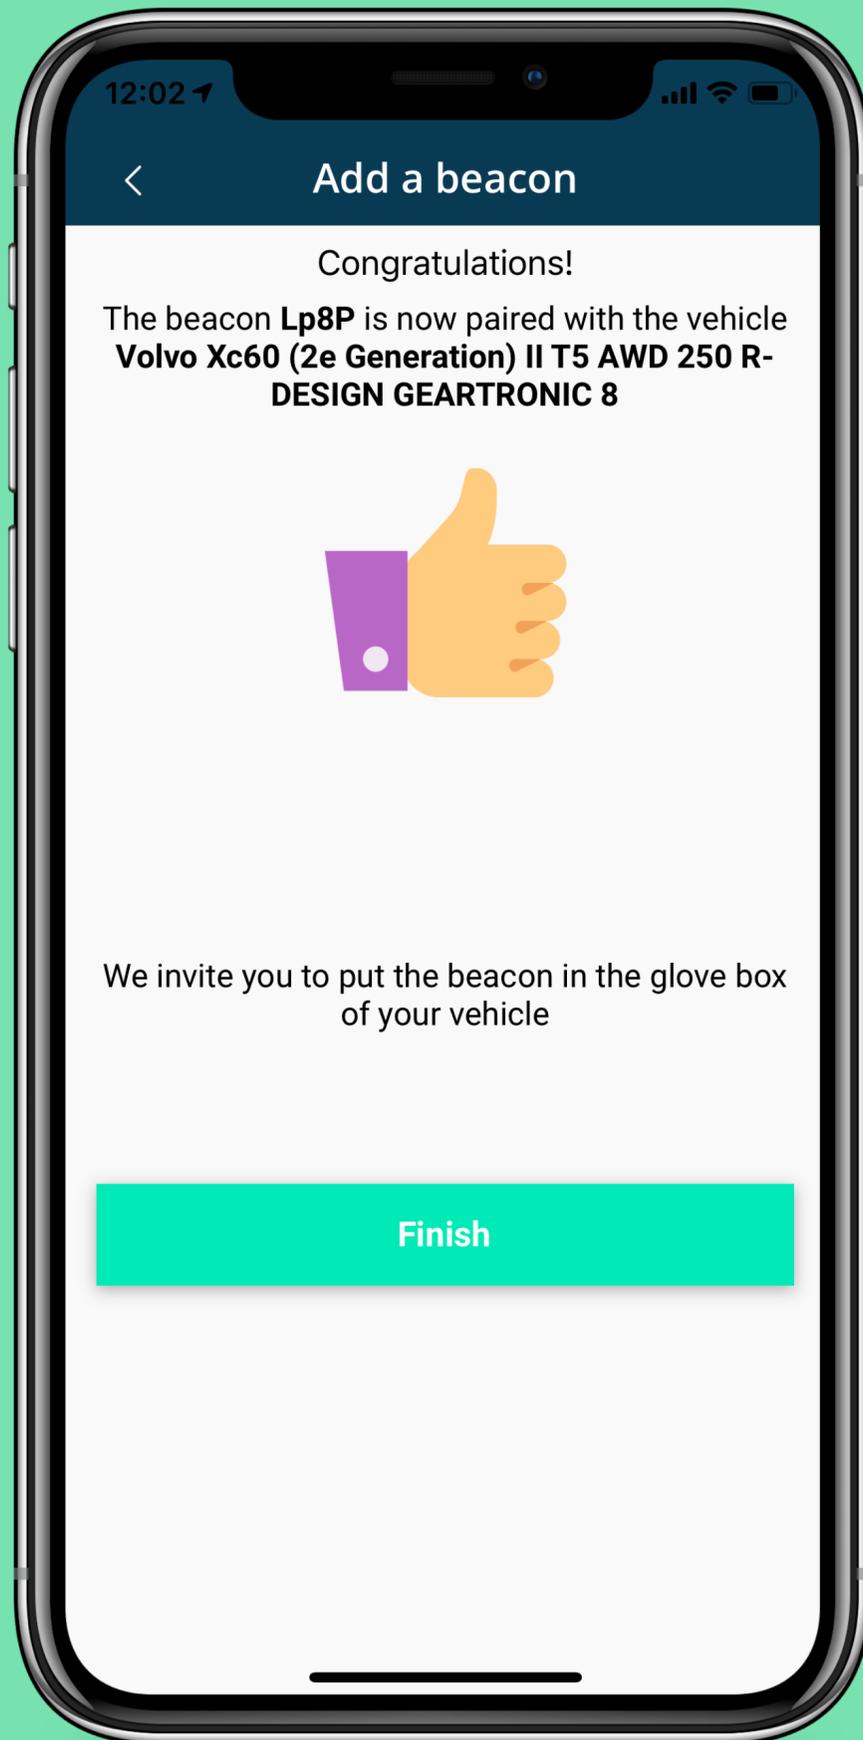


The application confirms that the beacon is now linked to the vehicle

To complete the process, click on **FINISH**



This choice is saved on the application



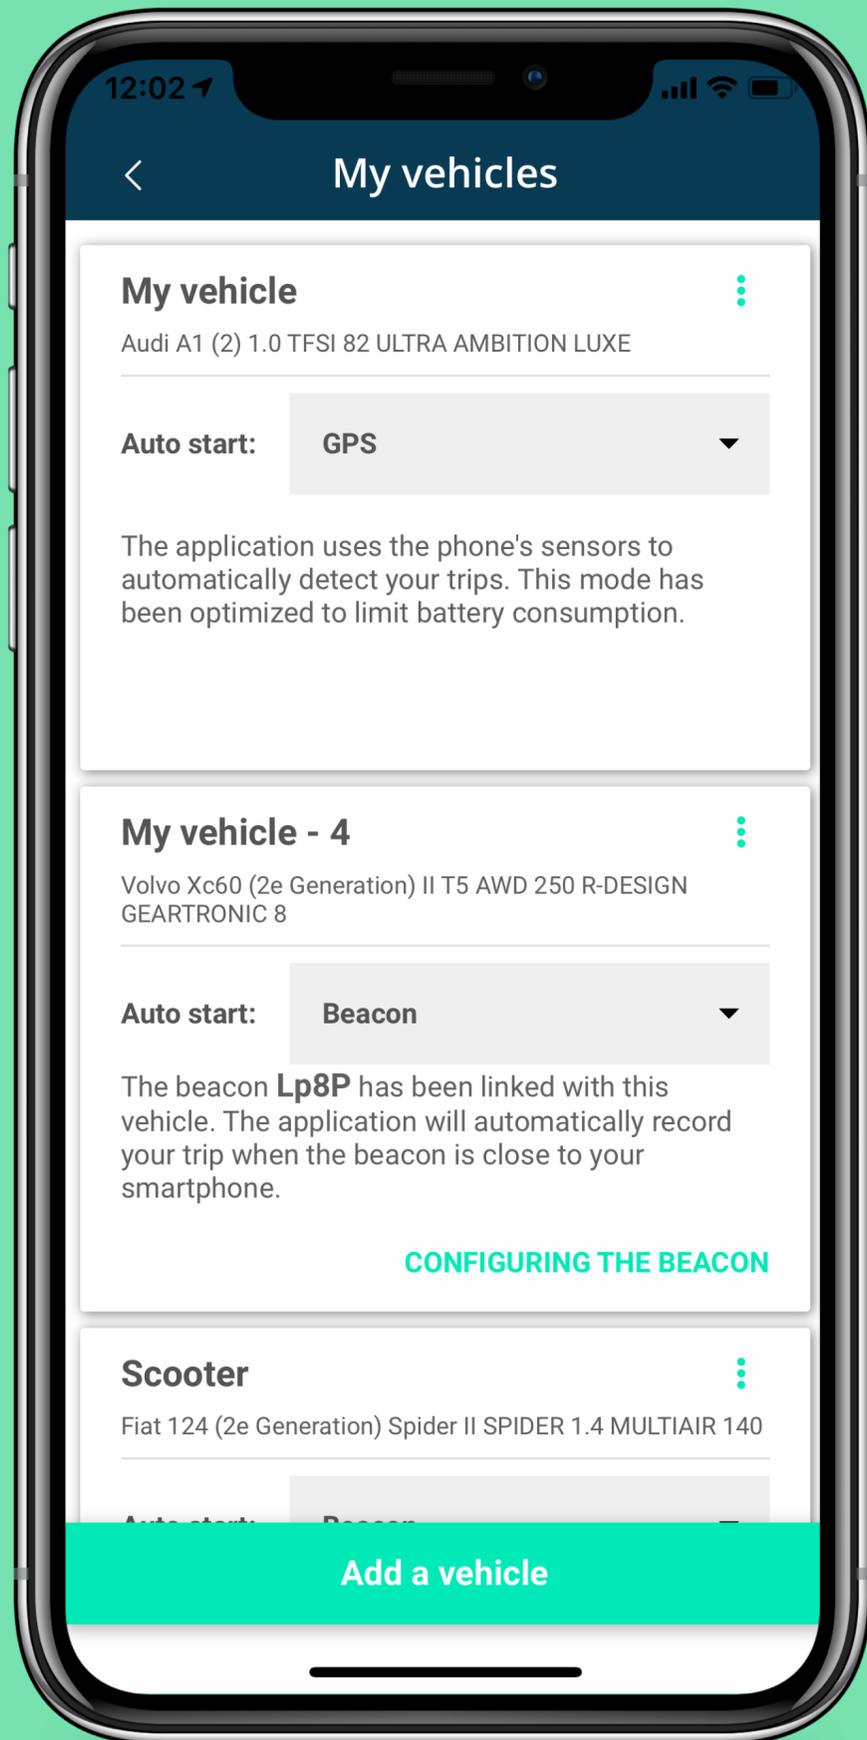

END



The beacon identifier is displayed on the card of the vehicle with which it is linked

